

INSTRUCTIONS: WALL SCONCES SPHERE

Models: DW-AS10, DW-AS12, DW-AM12, & DW-AM14 Series

Read all instructions before installing.
Disconnect power before installing or re-lamping.
For installation by a qualified electrician.

HANGING THE FIXTURE

1. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
2. Shut off power at the circuit breaker and remove old fixture including the crossbar.
3. Support the weight of the fixture.
4. Feed power wire from the fixture up through the center hole of the cross bar (B). Connect fixture wires to wires in the junction box with wire nuts.
5. Connect ground wire to the green grounding screw on the crossbar.
6. Install two screws (A) into the crossbar (B) as shown.
7. Attach the Crossbar (B) to the Outlet box in the wall with two screws (C). The side of the Crossbar with "GND" marked on it and two convex points must face out.
8. Slip the Canopy (F) up to the wall and lock the Canopy in place by threading the Knurled collars (I) onto the screws.
9. Install the light bulb in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!)**
10. Attach the shade (H) to the fixture frame (K) and secure with Knurled screws (G).
11. Attach the shad/frame assembly to the canopy with Knurled screws (J)
12. Attach dust cover (E) to the top of the canopy with screws (D)

