

INSTRUCTIONS: Track Fixture: Model 819

CAUTION:

- Always turn off power at main switch prior to installation to prevent electrical shock.
- Read all instructions before installing.

Overview:

Low voltage track lighting fixture with electronic transformer for use with WAC series track. Uses MR16 50W lamp, or may be ordered with optional "L" suffix for 75 watt version. Fixture may also be compatible with other manufacturer's brand of track (consult factory for compatibility).

To Install Lamp:

Install lamp parts in the following order:

1. Insert lamp into the Bi-Pin ceramic socket.
2. Push lamp against the gimbal ring and seat the retaining spring in the groove.
3. Place the leveling spring (flat side towards the lamp) on the shoulder inside the gimbal ring.
4. Place the glass lens into the lens retaining ring.
5. Thread the lens retaining ring clockwise to the front of the gimbal ring.

Accessories:

Accepts all colored glass lenses, beam elongator, spread lens, and honeycomb louver.

