


**INSTRUCTIONS:     Installing   HM-XADJ  
Field shortening Adapter**

**Safety Instructions:**

A qualified electrician must install fixture only. Fixture is intended for installation in accordance with National Electric Code, local and Federal code specifications.

To reduce the risk of fire, electrical shock and injuries to persons:

1. Read all instructions.
2. Turn off power at main switch before installing or modifying the system.
3. Intended for use with WAC Flexrail2 only.
4. Retain instructions for future reference.

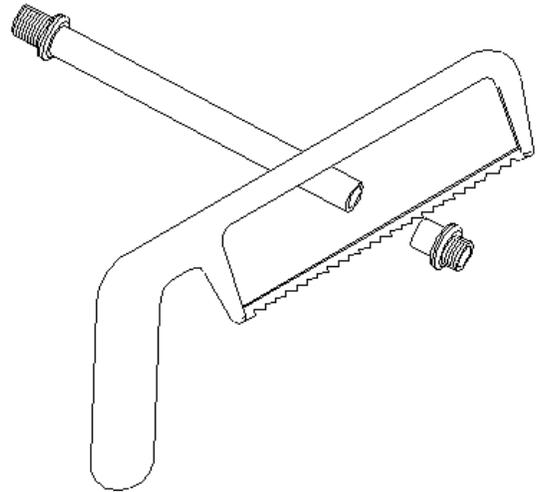

**Field Cutting Standoffs:**

1. The Coupler works on all types of standoffs, and "I" connectors.
2. Unscrew the rail adapter from the bottom of the standoff tube.
3. Cut the bottom end of the standoff to the desired length using a hack saw or tube cutter.
4. Use a file or emery paper to remove burrs. Brush out any remaining debris.
5. Thread the coupler tight into the top of the rail adapter.
6. Use the Allen wrench supplied. Back out the setscrews on the coupler so there is clearance for the standoff tube to be inserted.
7. Insert the tube fully into the coupler, and tighten setscrews on either side.

