

INSTALLATION INSTRUCTION

3" Low Voltage - Shower Light With Clear Flat Lens

HR-D329-S

WAC LIGHTING

Responsible Lighting®

SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.



- Read all instructions before installing.
- System is intended for installation in accordance with National Electric Code, and local regulations. Consult with local inspector to assure compliance.
- To reduce the risk, electrical shock, turn off power at main switch before installing or modifying the system.
- Retain instructions for future maintenance reference.

OVERVIEW

Trims fit housings from the HR-301 and the HR-302 series. Housing type and trim selection will determine maximum wattage; consult catalog or spec sheet for compatibility.

INSTALLING LAMP AND TRIM:

1. Trim can accept a 50W Xenon (not tungsten halogen) lamp or an MR16 35 watts maximum.
2. Xenon Installation: Pivot the aluminum disc of the lamp socket under the "V" shaped spring.
3. Seat the socket retaining spring above the disc, until the spring edges seat in the slots. Disassemble the glass dome as show in the diagram, insert lamp from bellow and re assemble glass dome.
4. MR16 Installation: Place the glass lens under the "V" shaped spring. The lamp is secured by pressing it into the "V" shaped spring while pushing downward. Push socket on to lamp pins.
5. Push the trim assembly into the housing until flush with the ceiling.

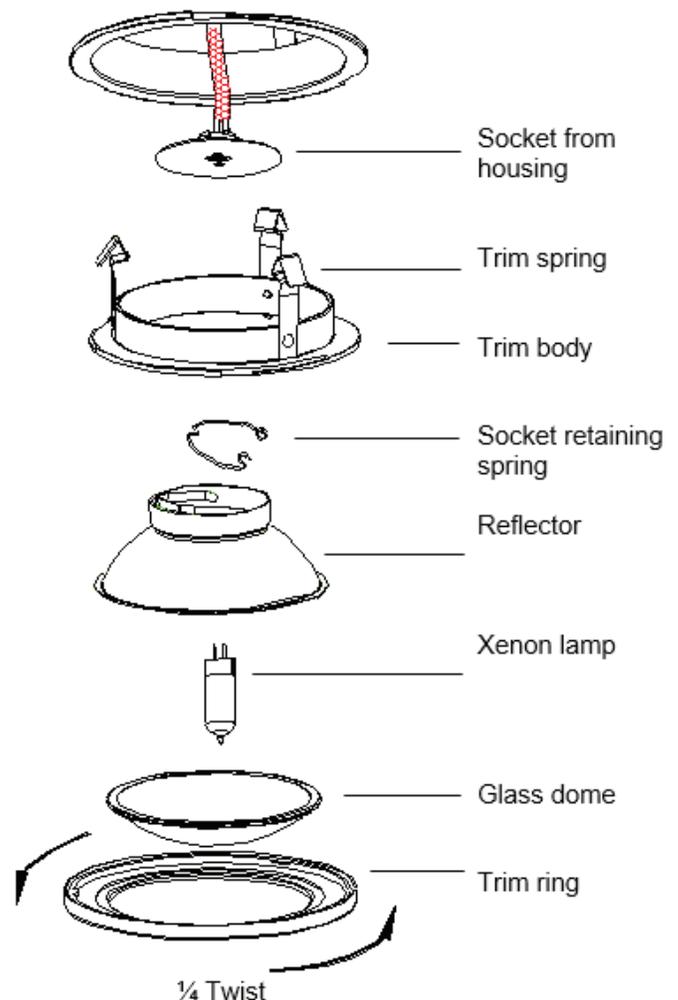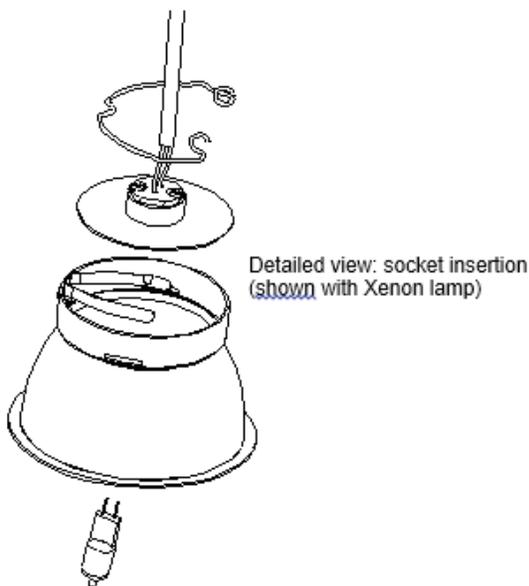

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585