INSTALLATION INSTRUCTION

Mint - Low Voltage Quick Connect™ Fixtures

OF-181

WAC LIGHTING Responsible Lighting®

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Lighted lamp is HOT!
- WARNING- To reduce the risk of FIRE OR INJURY:
- Turn off all power and allow to cool before replacing lamp.
- Lamp gets HOT quickly! Contact only switch/plug when turning on.
- Do not touch lens, guard, or enclosure.
- Keep away from materials that may burn.
- Do not touch the lamp at any time. Use a soft cloth.
 Oil from skin may damage lamp.
- Do not operate the luminaire with a missing lens or damaged shield.
- Save these instructions.

OVERVIEW

Fixtures are designed for use with all WAC quick connect adapters. They may also be used on other manufacturers brand of quick connect (consult factory for compatibility). This fixture may be mounted to Solorail, Monopoints, or standard track, by coupling to a female quick connect adapter. The fixture is compatible with various metal and glass shade choices (see below).

INSTALLING LAMP & SHADE:

- 1. Place the lamp inside the shade so the two pins protrude through the back. Insert the lamp into the fixture by aligning the pins with the socket holes, and gently pushing until lamp seats.
- 2. Use an MR16-G (glass covered lamp) 75 watt max (12 or 24 volt depending on power supply).
- 3. Note: Fixture may also be used with 50W Xenon bi-pin lamp.

INSTALLING THE QUICK CONNECT:

- 1. Insert the post of the quick connect into the quick connect adapter.
- 2. Thread the top half of the conical section until it seats with the adapter.
- 3. Adjust fixture position, use caution not to loosen the conical section.

ACCESSORIES:

Accepts glass or metal shades from the G100 series.

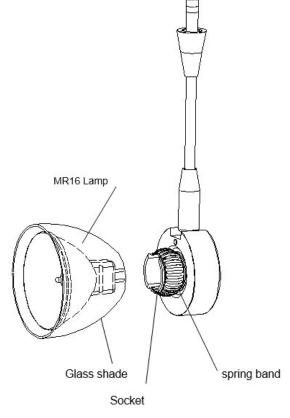


Diagram above shows the G111 shade

Installing to quick connect adapter

