

INSTALLATION INSTRUCTION

Ovum, Charge, Portal LEDme® Quick Connect™ Fixtures QF-LED171

WAC LIGHTING
Responsible Lighting®

OVERVIEW

QF-LED171 fixture is designed for use with WAC Quick Connect™ systems available in: Solorail(LM), Duorail(LM2), Monopoint(QMP), Line Voltage Track(H, J, L), Flexrail(HM1)

QUICK CONNECT™ ADAPTER (ORDER SEPARATELY)

Solorail (LM) Adapter: **LM-QADP**

Duorail (LM) Adapter: **LM2-QADP**


Flexrail1 (HM1) Adapter: **HM1-EN50**

Line Voltage Track (H, J, L) Adapter:

EN-HQ50AR, EN-JQ50AR, EN-LQ50AR

INSTALLING THE QUICK CONNECT:

1. Insert the post of the quick connect into the quick connect adapter.
2. Thread the top half of the conical section until it seats with the adapter.
3. Adjust fixture position, use caution not to loosen the conical section.

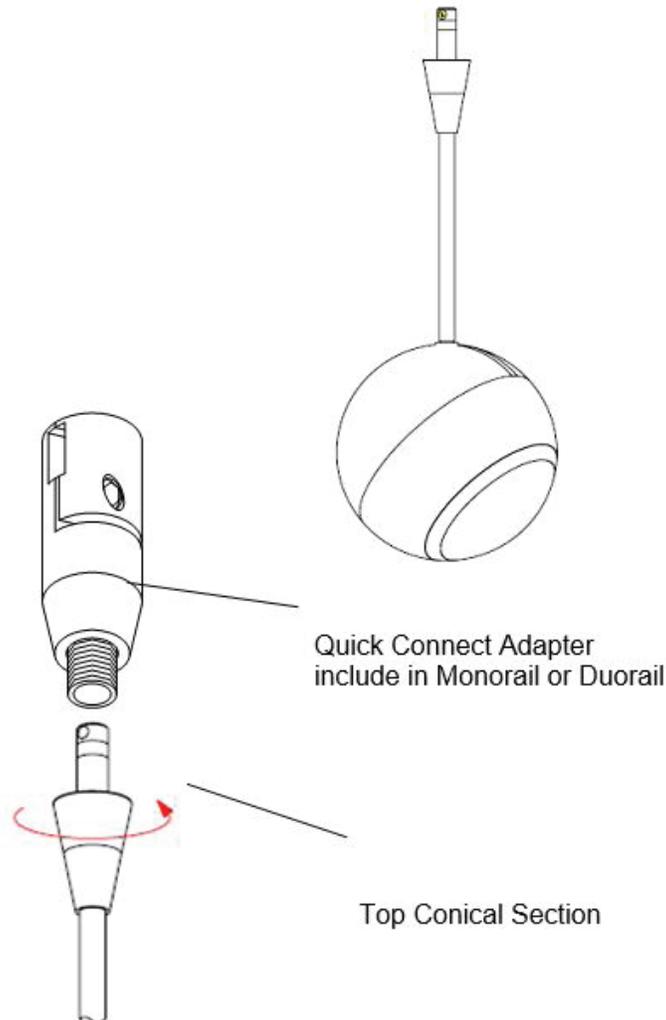

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585