

INSTALLATION INSTRUCTION
Miniature Round Canopy
with Wiring Compartment - QMP-MI-TR


CAUTION:

- Always turn off power at fuse box prior to installation to prevent electrical shock.
- For installation by a qualified electrician.

OVERVIEW

The Mini Monopoint designed for use with all WAC QUICK CONNECT™ fixtures and pendants (50 watts max). It is designed to mount to ceilings or wood surfaces. It comes with it's own wiring compartment, that will accept trade size connectors. The Mini Monopoints require either a 12 or 24 volt remote mounted transformer.

1. Consult voltage drop guidelines below to determine distance and wire gauge sizes
2. Cut out: 1 ¾"
3. Remove the metal ring and separate the canopy from wiring compartment.
4. Remove the knock out from the top of the wiring compartment.
5. Attach the wiring compartment to the surface using screws provided.
6. Guide the secondary wires from the transformer through the knock out in the wiring compartment.
7. Connect fixture wires to transformer secondary wires, with wire nuts (supplied). Tuck excess wire into the wiring compartment
8. Mount the canopy to the surface, and tighten the metal ring to the quick connect fitting
9. Install quick connect fixture or pendant by inserting quick connect post into fitting and threading clockwise until snug.

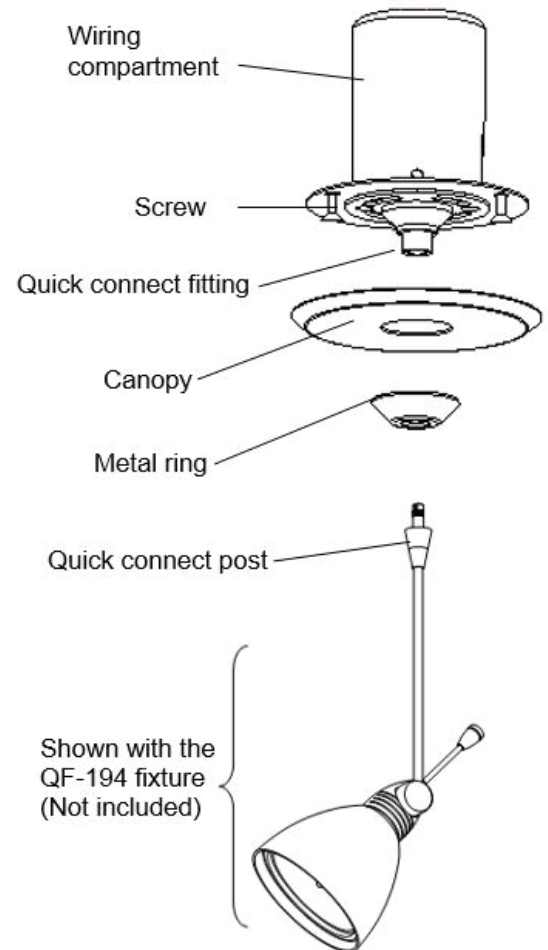

Retain instructions for future reference.

VOLTAGE DROP GUIDELINE/ TRANSFORMER TO CANOPY DISTANCE		
WIRE SIZE	35 W	50 W
18 GAUGE	8 FT	8 FT
16 GAUGE	12 FT	12 FT
14 GAUGE	16 FT	16 FT
12 GAUGE	20 FT	20 FT
Data based on 5% voltage drop		