

# Instruction: LED WALL SCONCE BRACKET

## Model: WS-MR57LED

### CAUTION:

- Always turn off power at main switch prior to installation to prevent electrical shock.
- Intended for installation in accordance with National Electrical Code, and local regulations.
- For installation by a qualified electrician.
- Install over a standard 4-inch junction box.


### Overview:

WS-MR57LED is designed to accept glass shades from the G500 series. Check catalog for various style and color choices.

WS-MR57LED comes with a self-contained electronic transformer that may be dimmed with an electronic low voltage dimmer switch.

### Fixture Installation:

1. Unscrew the lock ring and separate the canopy and mounting plate.
2. Connect ground wire from junction box to the grounding wire on the mounting plate.
3. Connect corresponding colored wires from the junction box to fixture wires, with wire connectors.
4. Tuck excess wire into the junction box. Attach the mounting plate to the junction box using the slotted holes.
5. Adjust the fixture shaft, align the socket vertically, by loosen and tighten the three screws on the mounting plate collar.
6. Secure the canopy to the mounting plate by tightening lock ring.

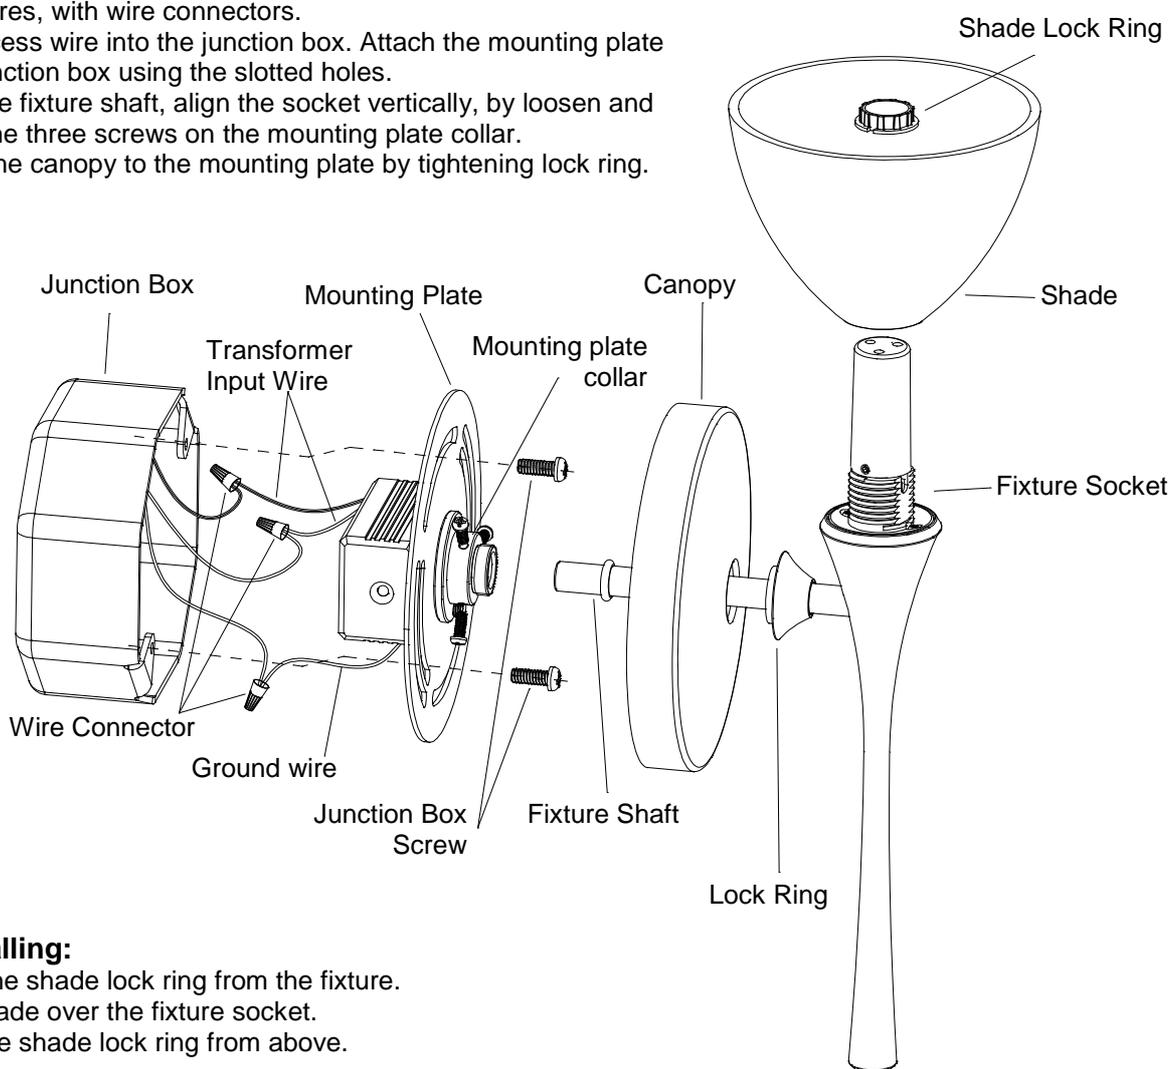

### Shade Installing:

1. Unlock the shade lock ring from the fixture.
2. Place shade over the fixture socket.
3. Screw the shade lock ring from above.