

INSTALLATION INSTRUCTION
Miniature Low Voltage Recessed Fixtures
HR-1135

WAC LIGHTING
Responsible Lighting®


SAFETY INSTRUCTION

To reduce the risk of fire, electrical shock and injuries to persons :

- Use only insulated staples or plastic ties to secure cords.
- Route and secure cords so they will not be pinched or damaged when cabinet is pushed to the wall.
- Position cabinet light with respect to cabinet so as to permit reading of lamp replacement marking during re-lamping.
- Not intended for recessed installation in ceilings.

1. Cut a 2 5/8" diameter opening on the mounting surface.
2. Connect "output" wires from the transformer to the socket wires with wire nuts provided.
3. Insert lamp into the porcelain socket.
4. Place the lens over the lamp and secure with the lens clip provided.
5. Insert fixture into the opening.

Note : This fixture is designed for use with an MR11 lamp of 12V, 35W or less.

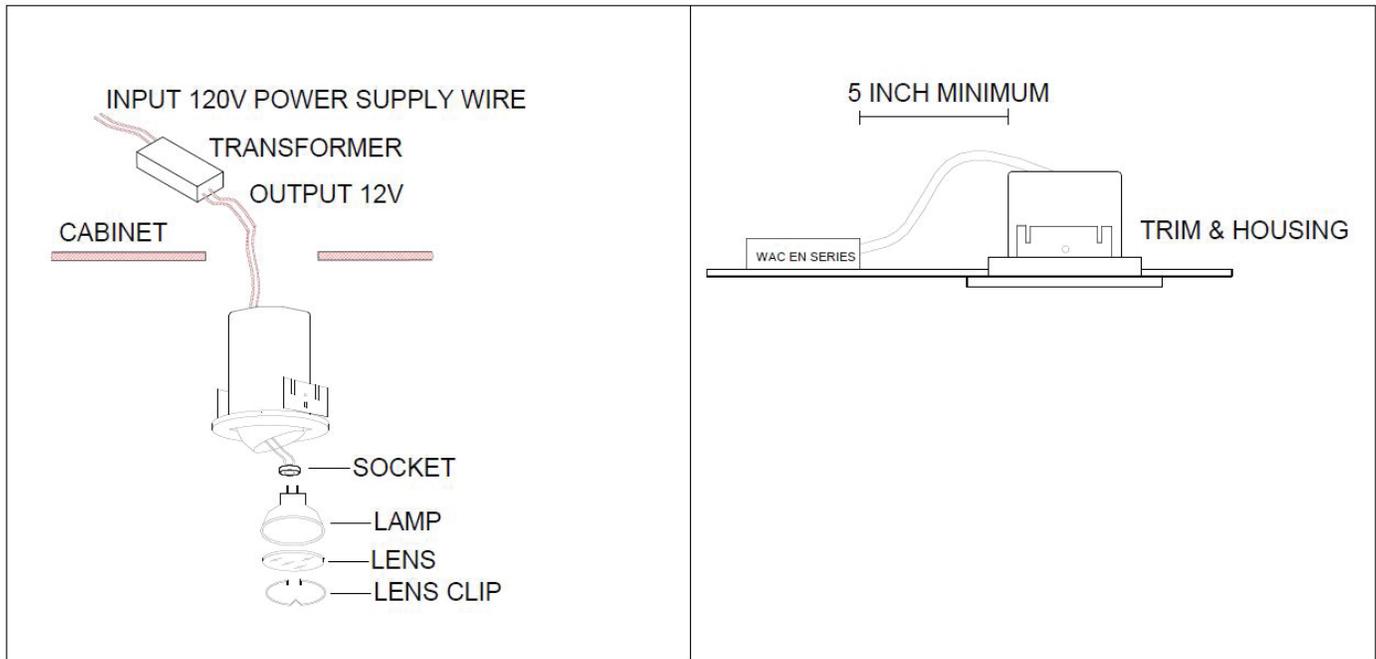

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585