

INSTALLATION INSTRUCTION

Miniature Low Voltage Recessed Fixtures

HR-1136, HR-1137

WAC LIGHTING
Responsible Lighting®


SAFETY INSTRUCTION

To reduce the risk of fire, electrical shock and injuries to persons :

- Use only insulated staples or plastic ties to secure cords.
- Route and secure cords so they will not be pinched or damaged when cabinet is pushed to the wall.
- Position cabinet light so that lamping instructions are visible.
- Not intended for recessed installation in ceilings.

1. Cut a 2 3/8" diameter opening on the mounting surface.
2. Unscrew nut on top of fixture to remove can.
3. Connect "output" wires from the transformer to the socket wires with wire nuts provided.
4. Place lens and secure lamp in place.
5. Insert lamp into the porcelain socket.
6. Push the trim up against the can and secure with nut.
7. Insert fixture into the opening.

Note : This fixture is designed for use with an MR11 lamp of 12V, 35W or less.

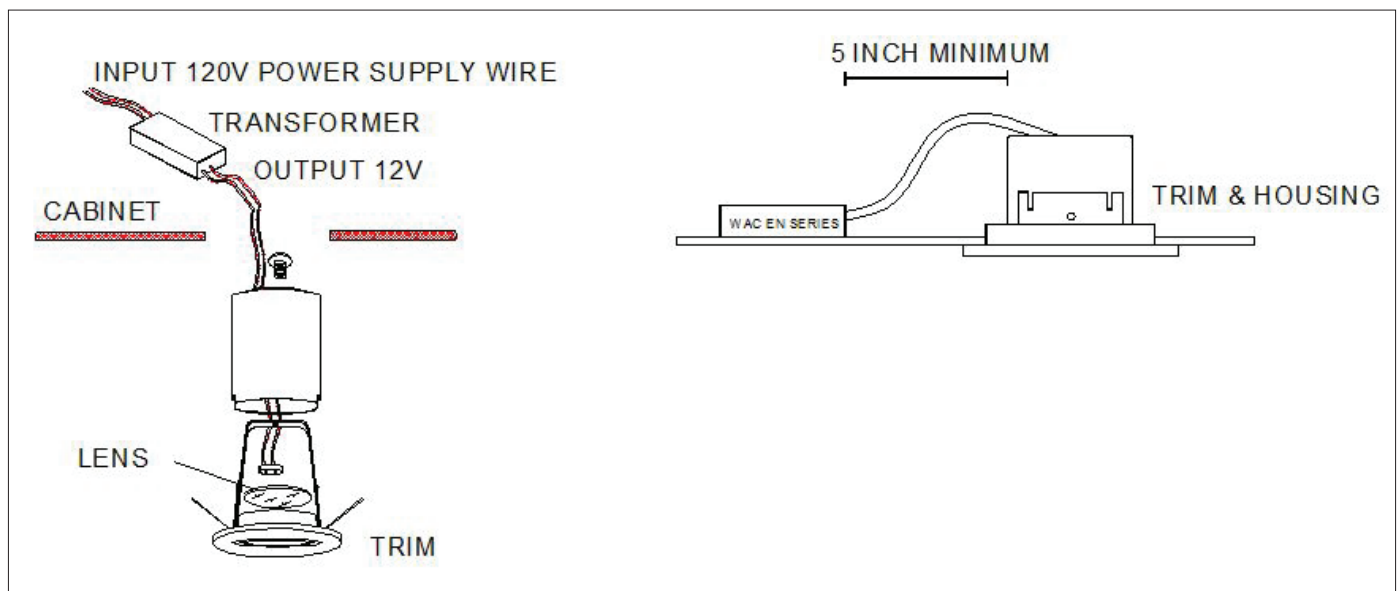

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585