


BULB INSTALLATION INSTRUCTIONS

1. Connect wires from phenolic shield to the power terminals of the PAR36 or AR111 bulb by means of tightening the screws.
2. Insert excessive wires back into the phenolic shield, and snap the bulb into the two clamps located at the back of the shield.
3. Secure the bulb in place with the retainer spring provided.


RETAINER
SPRING



BULB

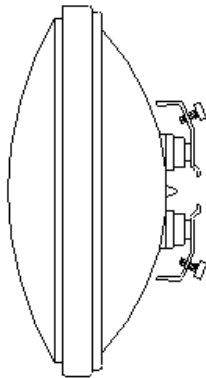

936

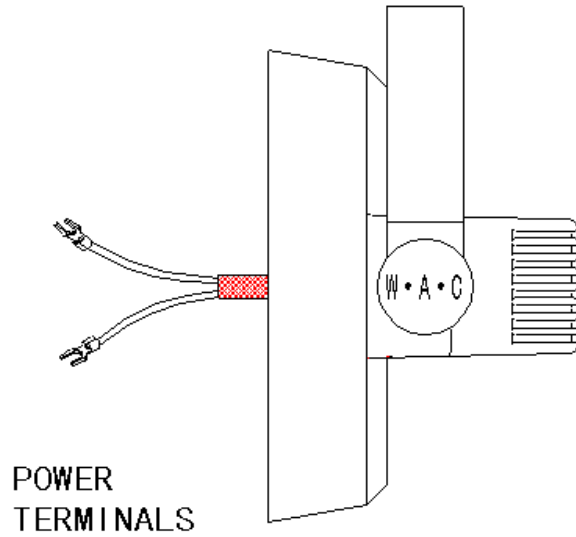

 **WAC LIGHTING**
Responsible Lighting

Retain these instructions for future service and adjustments
615 South Street, Garden City, NY 11530
Tel: (516) 515-5000 Fax (516) 515-5050
www.waclighting.com